




Standard Pre-Filter Change Instructions

STEP 1: DEPRESSURIZE THE WATER SOFTENER

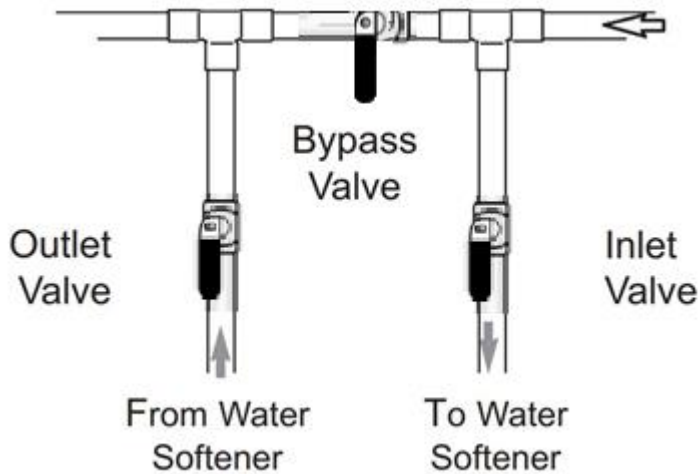

Turn off inlet valve by turning it perpendicular to or across the pipe.

Turn on bathroom cold faucet in your home to depressurize system. Let it run until it goes slow or stops.

Turn off outlet valve.

STEP 2: REMOVE THE USED FILTER CARTRIDGE

Place a bucket underneath your filter housing since some water may come out when it is opened. Twist off bottom canister counter-clockwise. Dispose old filter and rinse out canister.

Do not press the red button at any point.

STEP 3: INSTALL THE NEW FILTER CARTRIDGE

Insert the new filter in the bottom canister.

Put a small amount of silicone lubricant on the o-ring located in the bottom canister.

Place the bottom canister onto the filter housing, lining up the threads and twist the bottom canister until it seals.

STEP 4: PUT SOFTENER BACK IN SERVICE

Put your inlet and outlet softener valves back into the original position, parallel to the pipes.

Please note that you may experience some air discharge from your faucets after this filter change, this is normal.

You have now successfully changed your water softener's prefilter! Replacing your prefilter regularly will help protect your water softener.

If you have any questions or concerns, please give us a call.